


## Generation 4 Display AutoTrac

1. Press the “Set Track” Button.




2. Press the “New Track” Button.

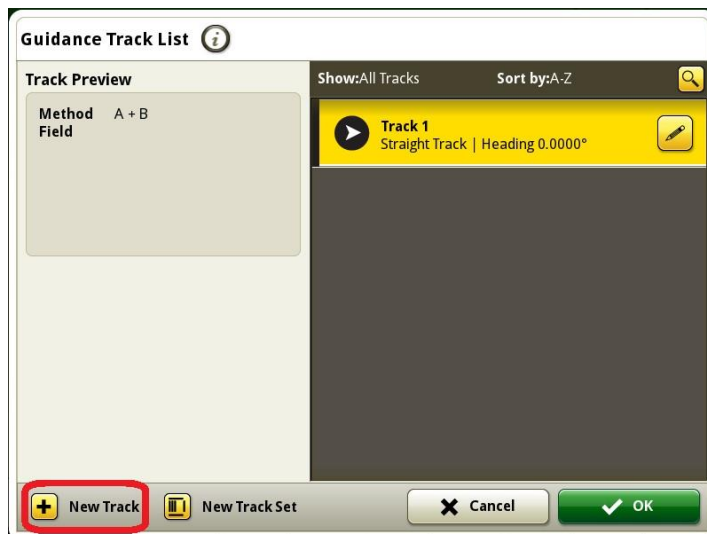



3. Select the “A + B Method” Button.

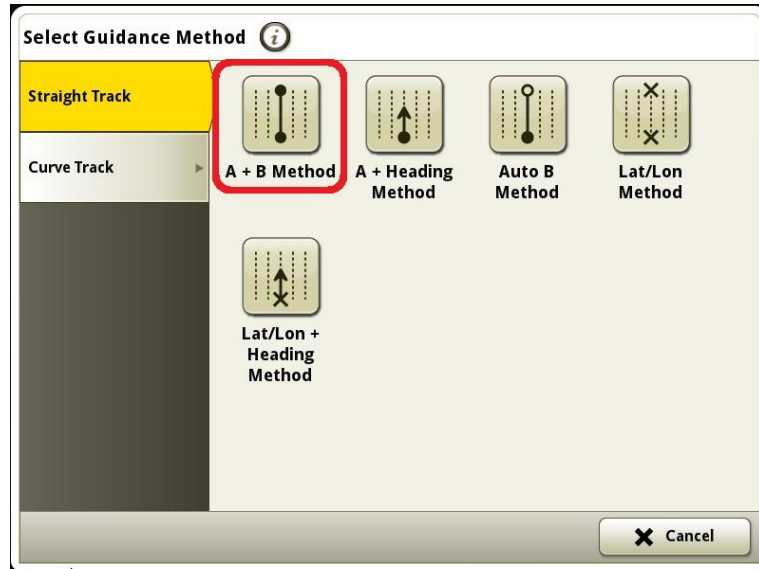

4. Make sure that you have a “Track Name” entered then press the “OK” button.



5. Drive the vehicle to the location of the field that you want to set Point A and press the "Set A" Button.



6. Drive the vehicle to the location of the field that you want to set Point B and press the "Set B" button.




7. Press the "Done" button.



8. After setting the AB line, then 2 pieces of the AutoTrac Pie should be filled in as shown below.



9. Press the AutoTrac Pie to enable the AutoTrac. After you do this, 3 pieces of the AutoTrac Pie should be filled in.

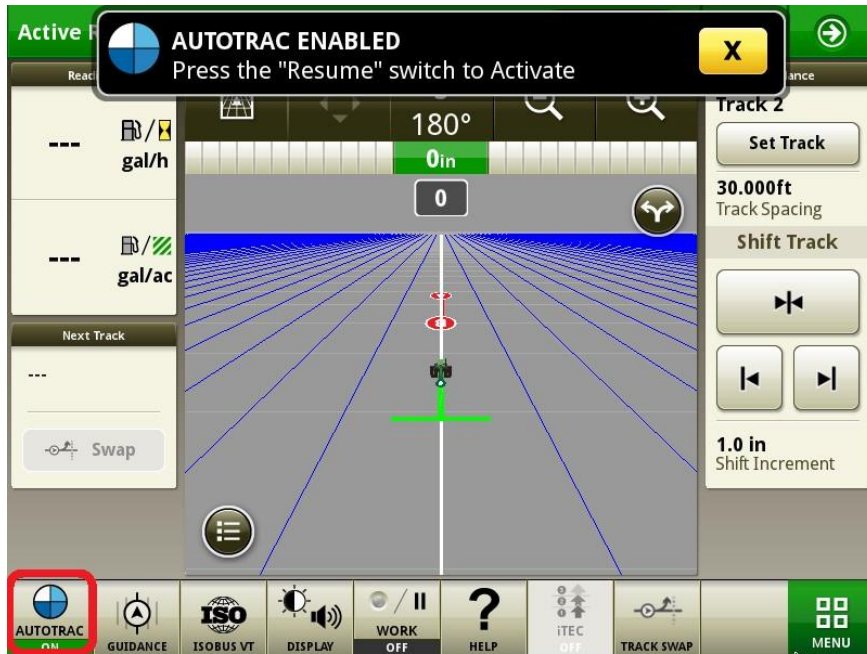

10. Drive the vehicle close to the AB line and press "Resume or Auto" Switch to activate AutoTrac.





# RIECHMANN BROS

Family Owned and Operated Since 1922

11. Once you press the “Resume or Auto” Button you will hear a beep noise and the AutoTrac pie will turn green with a big “A” in the center of the pie. This means that AutoTrac is active.

